

GB AWZ 412

-  "Active" indicator light
-  "ON/OFF" Button
-  "Spin Speed Reduction" Button
-  "Rinse Hold" Button
-  "Intensive Rinse" Button
-  "Dryer Half Load" Button
-  Washing "Temperature" Selector Knob
-  "Drying Time" Selector Knob
-  "Washing Programmes" Selector Knob







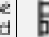

 



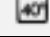



Avoid touching the glass door during and immediately after running the drying cycle since it will be hot.

Do not dry fabrics that have been treated with solvents or petroleum based products, sleeping bags, duvets or bulky clothing.

Avoid drying clothing excessively in order to prevent creasing and difficult ironing.

For hand-washed items, remove excess water using the highest spin speed before starting the drying cycle.

*: option / Yes: add the detergent.

Programme selector knob	Programme		Type of load/Notes	Max. Load Washing Kg	Washing temperature selector knob °C	Detergent and Additives			Options			1/2 load for drying	Max. Drying Load	Approx Iron Dry Time	Approx Cupboard Dry Time
						Pre-wash	Main wash	Fabric Softener	Intensive Rinse	Rinse Hold	Spin Speed Reduction				
														*	*
A		Prewash + White Cotton	Heavily soiled, hard-wearing cotton and linen fabrics (bed linen, table linen, underwear, shirts etc.).	5.0	Max. 90°	yes	yes	*	*	—	1200 550	*	2.5 kg	70/100	120
B		White Cotton	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton or linen.	5.0	Max. 90°	—	yes	*	*	—	1200 550	*	2.5 kg	70/100	120
C		Coloured Cotton	Average to heavily soiled, hard-wearing cotton or linen fabrics.	5.0	Max. 60°	—	yes	*	*	—	1200 550	*	2.5 kg	70/100	120
D		Rapid wash	Lightly to normally soiled bed linen, table linen, underwear, towels, shirts etc. made of cotton or linen.	5.0	Max. 40°	—	yes	*	*	—	1200 550	*	2.5 kg	70/100	120
2		Special Rinse and Short Spin	<i>Programme for treating laundry with starch and/or softener. The programme ends with an intensive spin cycle.</i>	5.0	—	—	—	*	*	—	1200 550	—	2.5 kg	70/100	120
3		Drain / Long Spin	<i>Drain, with final spin. Alternative method for unloading laundry earlier.</i>	5.0	—	—	—	—	—	—	—	—	—	—	—
E		Prewash + Synthetics	Heavily soiled shirts, blouses, aprons, etc. made of polyester (diolen, trevira), polyamide (perlon, nylon) or cotton blends.	2.5	Max. 60°	yes	yes	*	—	*	550	*	1.5 kg	30/40	50
F		Synthetics	Lightly to normally soiled blouses, t-shirts, aprons, etc. made of polyester (diolen, trevira), polyamide (perlon, nylon) or cotton blends.	2.5	Max. 60°	—	yes	*	—	*	550	*	1.5 kg	30/40	50
1		Rinses + Delicate Spin	<i>Rinse program, ending with a spin cycle.</i>	2.5	—	—	—	*	—	*	550	—	1.5 kg	30/40	50
2		Special Rinse and Short Spin	<i>Programme for treating laundry with starch and/or softener. The programme ends with an intensive spin cycle.</i>	2.5	—	—	—	*	—	*	550	—	1.5 kg	30/40	50
4		Drain / Delicate Spin	<i>Drain, with final spin. Alternative method for ending the "Synthetic", "Delicate" and "Wool" programmes and for unloading the laundry earlier.</i>	2.5	—	—	—	—	—	—	550	—	1.5 kg	30/40	50
G		Delicate	Only machine washable woollens with Pure New Wool label. <i>If you select "Rinse and Hold" do not leave items to soak for too long.</i>	1.0	Max. 40°	—	yes	*	—	*	550	—	—	—	—
4		Drain / Delicate Spin	<i>Drain, with final spin. Alternative method for ending the "Synthetic", "Delicate" and "Wool" programmes and for unloading the laundry earlier.</i>	1.0	—	—	—	—	—	—	—	—	—	—	—

* drying times for guidance only.
These times will be perfected with experience and use.

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 20155

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours:minutes)
A - Cotton	90°	5.0	57	1.85	2:28
B - Cotton	90°	5.0	50	1.07	2:08
C - Cotton	60°	5.0	53	0.97	2:00
D - Cotton	40°	5.0	53	0.60	1:55
E - Synthetics	60°	2.5	60	0.83	1:15
F - Synthetics	60°	2.5	60	0.42	1:00
G - Wool	40°	1.0	61	0.32	0:48


The use of the prewash cycle increases programme duration by approximately 15 min. Consumption data was calculated based on normalized conditions in compliance with Standard IEC 60 456. The data on the "Energy Label" refers to programme "Coloured Cotton 60° C". Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. The drying times shown may vary based on the spin speed and type of fabric.

ADD THE DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergent and Additives" in the booklet.

1. Make sure that the **Programme selector** is set to "Stop".
2. Open the water tap.
3. Set the **Programme Selector** to the desired programme.
4. Set the **thermostat knob** to the desired temperature.
5. Set the **spin selector knob** to the desired speed.
6. **Special options** can be selected, if required.
7. Check that the door is well closed and turn on the washer-dryer by pressing the "ON/OFF" button. The indicator light comes on, indicating that the washer-dryer is on.

SELECT THE DESIRED OPTIONS

"Dryer half load" button 
(depending on model)

"Intensive Rinse" button (depending on model)

- The quantity of water duration of the rinse cycle are increased.
- This option is especially recommended in areas with extremely soft water, for baby linen and linen belonging to skin allergy sufferers.

"Rinse Hold" button (depending on model)

only for synthetic and wool programmes

- The laundry remains in the final rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from running.
- This option is particularly recommended for the programmes "Synthetics" or "Delicate".
- This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

To terminate the "Rinse Hold" option (depending on the model)

synthetic and wool programmes only

- Press the Rinse Hold button again; the load will be spun according to the selected programme.

If you do not wish to spin the clothes, turn the programme selector knob to the Drain cycle, after pressing the "No Spin" button.

"Spin Speed Reduction" Button

Reduces or increases the spin speed from 1200 to 550.

DOOR LOCK

The door locks automatically after the programme start until the end of the programme. If the programme selector is moved to the "Stop" position or if the electricity supply is interrupted, then after approximately two minutes the door is released. In this case do not open the door: because hot water could come out of the door.

CHANGING THE SELECTED PROGRAMME

To change a programme when a cycle has already begun:

1. Switch off the appliance by pressing the "ON/OFF"  button.
2. Select the new programme.
3. Start the programme by pressing the "ON/OFF"  button.

INTERRUPTING THE CURRENT PROGRAMME

To interrupt the selected programme and continue it at a later time:



1. Press the "ON/OFF"  button.
2. After the desired interval has passed, press the "ON/OFF"  button again.

AT THE END OF THE WASH PROGRAMME



1. At the end of the programme the programme selector moves to the "Stop" position.
2. To unload the machine wait for the door to release (approx. 2 minutes).
3. Switch off the appliance, open the door and unload the washing.
4. Close the water tap and leave the door ajar to allow the drum to dry out

SETTING THE DRYING CYCLE

1. Load the machine according to the maximum drying load table.
The drying function can only be used for cotton and synthetic programmes (not wool) and starts when the knob reaches the programme stop mark.
It is important that the laundry has been spun and was washed with water.

2. When the spin cycle is finished the programme selector moves to "Stop".
3. Select a drying time based on the type of fabric (cotton/synthetic), amount of laundry and desired final results (iron/cupboard dry), using the "Drying Time" knob.
4. Press the "Dryer Half Load"  button.
5. Turn on the water tap, check the drain hose, use the "ON/OFF"  button to turn on (the indicator light goes on).

SETTING THE WASHING/DRYING CYCLE IN SEQUENCE

1. The sequential washing and drying function can only be used for energy-saving and synthetic programmes (not wool) and starts when the knob reaches the programme stop mark.
2. Load the washer-dryer (according to the max. drying load table) and close the door
3. Select a drying time based on the type of fabric (cotton/synthetic), amount of laundry and desired final results (iron/cupboard dry), using the "Drying Time" knob.
4. Press the "Dryer Half Load"  button.
5. Set the "Washing Programme" knob to the desired programme
6. Press the "ON/OFF"  button to start the drying cycle.

NOTES AND INDICATIONS FOR USE

- **CLEANING THE FILTER**
To ensure smooth operation of the pump, check the filter regularly and clean it when necessary.

HOT / COLD FILL INSTRUCTION

If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

Make sure:

- a) The connections are tightly fixed
- b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

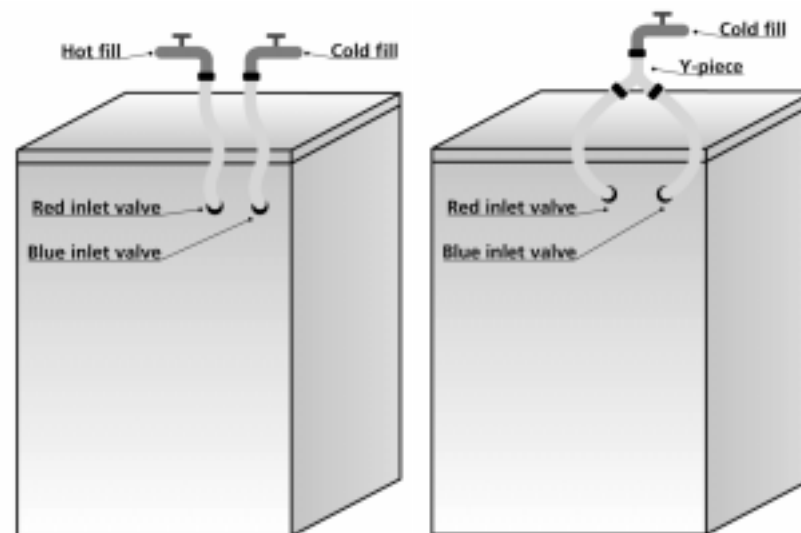


Fig.1

Fig.2

If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector. The Y-piece connector can be ordered via our Service Organization or purchased in a specialized hydraulic component store.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provider hoses.

Make sure:

All connections are tightly fixed.